

# Access MOD using SSH

From MOD Wiki

If you are a linux heavy user, you might want to access your MOD via SSH. Yes, you can do this.

SSH connection is open by default:

- user "root"
- password "mod".

File system is mounted read only. If you need to remount it in Read/write mode, do the following:

```
mount / -o remount,rw
```

**WARNING:** Great power comes with great responsibility. Changing things inside your MOD can be dangerous, only try this if you really know what you are doing!

Anyway, if something goes really wrong, you can always recover your MOD.

Retrieved from

"[https://wiki.moddevices.com/index.php?title=Access\\_MOD\\_using\\_SSH&oldid=11562](https://wiki.moddevices.com/index.php?title=Access_MOD_using_SSH&oldid=11562)"

- 
- This page was last edited on 9 November 2018, at 22:25.
  - Content is available under GNU Free Documentation License 1.3 or later unless otherwise noted.

