

# Custom IP Address

From MOD Wiki

ssh into the mod, then mount the filesystem in read-write mode.

Then run:

```
sed -i "s|192.168.51.1|192.168.52.1|" /etc/dnsmasq.conf /etc/network/interfaces /etc/ssh/sshd_config
# systemctl disable avahi-daemon
# systemctl disable avahi-dnsmasq
sync && mount / -o remount,ro && sync && reboot
```

NOTE: At this point it's not possible to have 2 MODs connected via USB, even if they use different IPs.

If you need 2 MODs, consider using one MOD connected via USB and the other connected via Bluetooth.

Retrieved from "[https://wiki.moddevices.com/index.php?title=Custom\\_IP\\_Address&oldid=11565](https://wiki.moddevices.com/index.php?title=Custom_IP_Address&oldid=11565)"

- 
- This page was last edited on 9 November 2018, at 22:28.
  - Content is available under GNU Free Documentation License 1.3 or later unless otherwise noted.

