

# Publishing Plugins

From MOD Wiki

## Local Deploy

Plugins are stored in

```
/root/.lv2/
```

. Typically, directories end up here through the UI installation system, which downloads the bundle from a URL. It is also possible to build a plugin locally and manually copy the archive to this directory. The following process works as of firmware 1.5. The root password is "mod".

Install new plugin

```
lscp -r myplugin.lv2 root@modduo.local:~/.lv2/
```

Upgrade plugin

```
lscp -r myplugin.lv2 root@modduo.local:~/
lssh root@modduo.local
# enter password
jcd .lv2/
jmv myplugin.lv2 ../myplugin.lv2.bak
jmv ../myplugin.lv2 .
```

Each option must be followed by a hard power off.

## Unstable Plugins

To enable the Mod hosted unstable plugin repository, go to the URL with the mod attached via USB

<http://modduo.local/settings>

Click the Advanced tab. Check the box to enable unstable plugins.

Retrieved from "[https://wiki.moddevices.com/index.php?title=Publishing\\_Plugins&oldid=11372](https://wiki.moddevices.com/index.php?title=Publishing_Plugins&oldid=11372)"

- This page was last edited on 16 December 2017, at 02:57.
- Content is available under GNU Free Documentation License 1.3 or later unless otherwise noted.

